



Supplies Needed

Spray Bottle with a few drops of dish soap • Isopropyl Alcohol • Masking Tape or Painters Tape • Tape Measure
Grease Pencil • Application Squeegee (or credit card) • Scissors or Xacto Knife • Hair Dryer or Heat Gun

1. Surface Preparation

All surfaces must be thoroughly cleaned prior to installation. Wash surface with soap and water and rinse. After surface has completely dried, wipe down area with isopropyl alcohol to remove any contaminants.

2. Temperature Requirements

Surface temperatures should be between 10°C - 30°C to achieve the best results.


3. Wet Application Method

(This method allow you to reposition the graphic and reduces bubbles and wrinkles)


1. Determine where the graphics will be applied.
2. Using a ruler and grease pencil draw guidelines to help with aligning the graphic.
3. With the graphic upside down on a flat clean surface remove the liner. Be careful not to leave any letters on the backing liner.
4. Lightly spray the back of the letters (adhesive side) and the application surface with soap and water solution.
5. Position and align your graphic using guidelines.
6. Using a squeegee or credit card, start in the middle of the graphic and lightly squeegee outwards removing all air and water mixture.
7. Let dry for 30-60 minutes before removing the application tape.
8. Carefully remove the application tape at a 180 degree angle flat against the graphic, if the graphics lifts with the tape, squeegee the graphic again and wait 15 minutes.

4. Dry Application - Center Hinge Method


All surfaces must be thoroughly cleaned prior to installation. Wash surface with soap and water and rinse. After surface has completely dried, wipe down area with isopropyl alcohol to remove any contaminants.

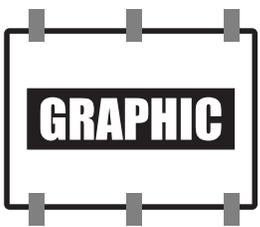


Align and secure with small pieces of tape.

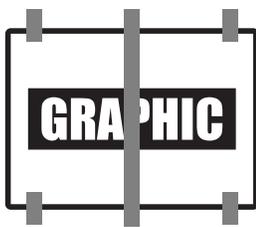


Apply tape vertically through the center of the graphic.

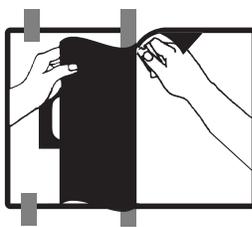

Fold graphic over hinge in middle, peel liner from graphic, cut liner and remove.

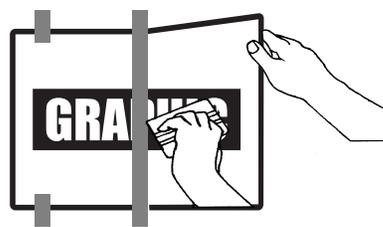

Fold back and squeegee using firm overlapping strokes, start from the center and work outwards, keep the graphic lifted allowing the graphic to adhere with pressure from the squeegee.

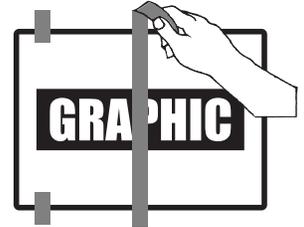

Remove remaining tape, remove remaining liner and squeegee using the same method in previous step.